4. Exploded View and Parts List

Page

4-1 Cabinet Assembly - - -

4-1 Cabinet Assembly

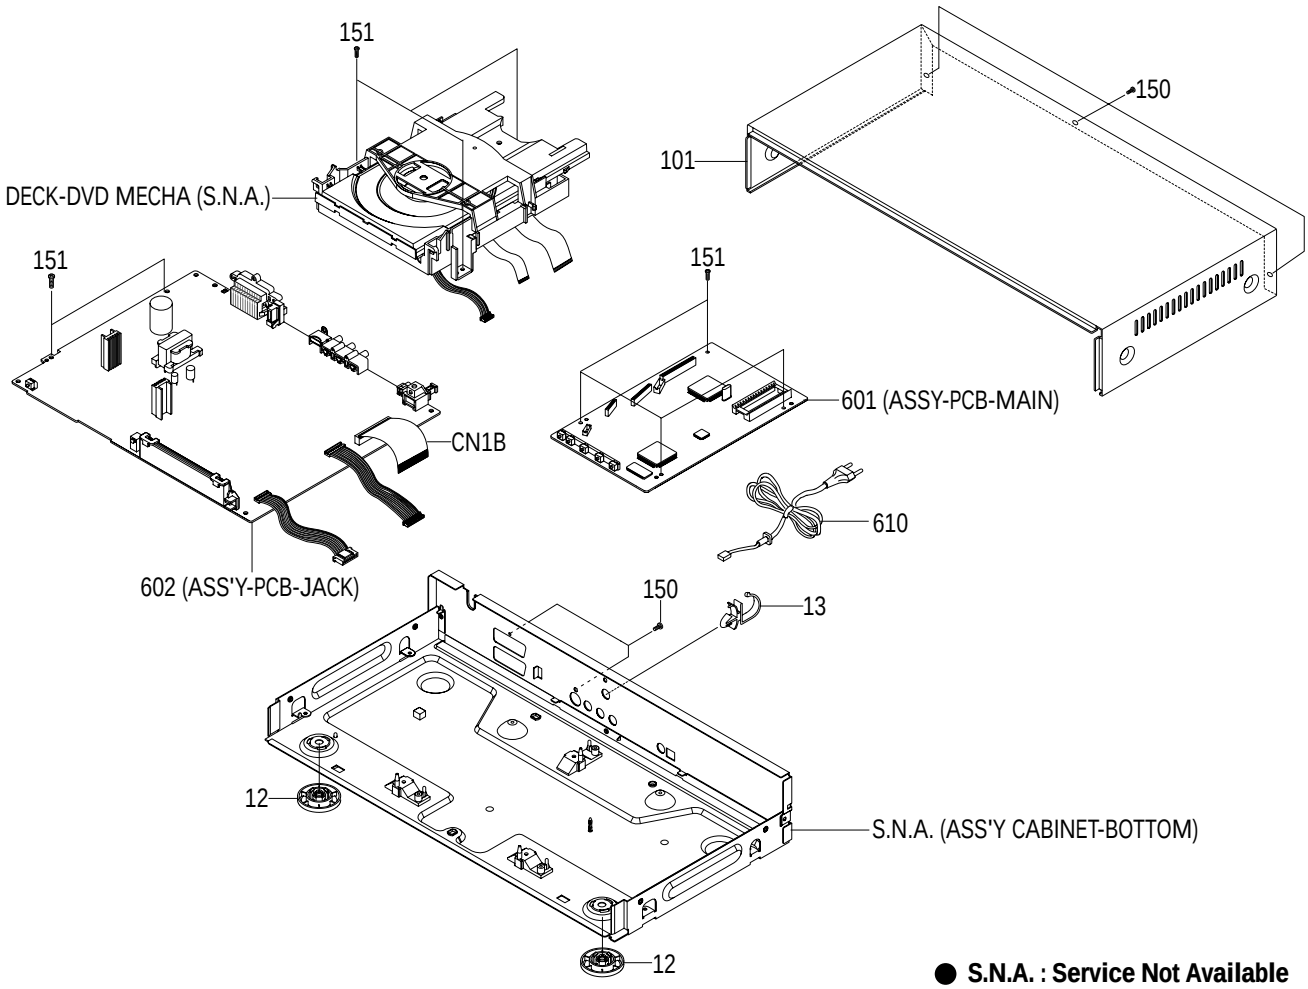

● **S.N.A. : Service Not Available**

DVD-S224/S224B	DVD-S225/S225B	UT01
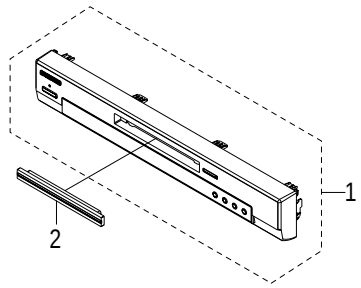	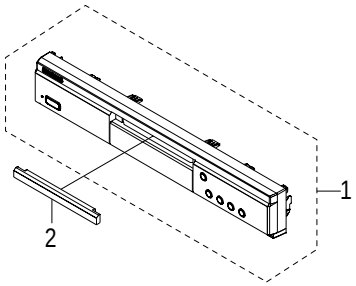	<DVD-S224/S224B/S225/S225B>
DVD-S324/S324B/S324W	DVD-S325/S325B	
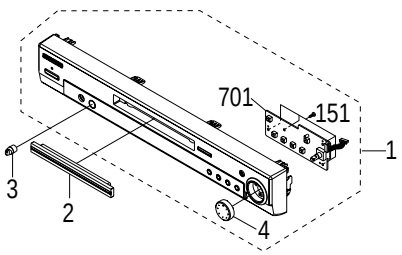	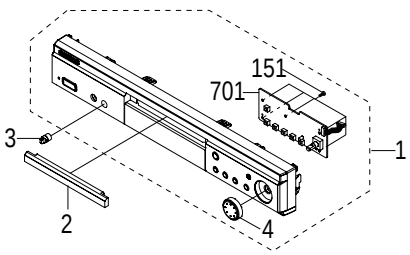	<DVD-S324/S324B/S324W/S325/S325B>

Loc. No	Parts No.	Description ; Specification	Remark
1	**Refer to table below**	ASSY FRONT CABINET	
2	**Refer to table below**	ASSY-DOOR	
3	**Refer to table below**	KNOB-VOLUME	
4	**Refer to table below**	KNOB-JOG	
12	AH61-00534B	LEG-FRONT;DVD-M101,ABS 94HB,-,SILVER,4MR	
13	AH65-00003A	CLAMP CORE;DVD-M101,NYLON 66,-,-,-,-	
101	**Refer to table below**	CABINET-TOP	
150	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK ,SWCH101	
151	6003-000276	SCREW-TAPTITE;BH,+,B,M3,L10,ZPC(YEL),SWC	
601	**Refer to table below**	ASSY PCB-MAIN	
602	**Refer to table below**	ASSY PCB-JACK	
610	AC39-10019A	POWER CORD;KKP-419C,H03VVH2-F,VDE/KEMA-K	COMMON
	AC39-12022K	POWER CORD;Y352160,H03VVH2-F,-,BS6500,1.	U.K. ONLY
701	**Refer to table below**	ASSY PCB-KEY	
CN1B	3809-001180	CABLE-FLAT;30V,-30TO+80C,80,,,35P,1.25mm	
UT01	**Refer to table below**	REMOCON-ASS'Y	

Regional	Models	1	2	3	4	101	601	602	701	UT01
EUROPE	DVD-S224	AH97-00938L	AH97-00943B	-	-	AH64-00933G	AH92-00933B	AK92-00010A	-	AH59-00092M
	DVD-S224B	AH97-00938F	AH97-00943F	-	-	AH64-00933A	AH92-00933B	AK92-00010A	-	AH59-00092P
	DVD-S225	AH97-00998A	AH97-00947B	-	-	AH64-00933G	AH92-00933B	AK92-00010A	-	AH59-00092M
	DVD-S225B	AH97-00998B	AH97-00947D	-	-	AH64-00933A	AH92-00933B	AK92-00010A	-	AH59-00092P
	DVD-S324	AH97-00941B	AH97-00943B	AH64-11306Z	AH64-01636B	AH64-00933G	AH92-00933C	AK92-00011A	AH92-01393A	AH59-00092M
	DVD-S324B	AH97-00941E	AH97-00943F	AH64-11306Q	AH64-01636D	AH64-00933A	AH92-00933C	AK92-00011A	AH92-01393A	AH59-00092P
	DVD-S325	AH97-00942B	AH97-00947A	AH64-11306Z	AH64-01636B	AH64-00933G	AH92-00933C	AK92-00011A	AH92-01393C	AH59-00092M
	DVD-S325B	AH97-00942D	AH97-00947D	AH64-11306Q	AH64-01636D	AH64-00933A	AH92-00933C	AK92-00011A	AH92-01393C	AH59-00092P
C I S	DVD-S224	AH97-00938B	AH97-00943B	-	-	AH64-00933G	AH92-01364E	AK92-00026A	-	AH59-00092M
	DVD-S224B	AH97-00938F	AH97-00943F	-	-	AH64-00933A	AH92-01364E	AK92-00026A	-	AH59-00092P
	DVD-S225	AH97-00998A	AH97-00947B	-	-	AH64-00933G	AH92-01364E	AK92-00026A	-	AH59-00092M
	DVD-S225B	AH97-00998B	AH97-00947D	-	-	AH64-00933A	AH92-01364E	AK92-00026A	-	AH59-00092P
	DVD-S324	AH97-00941B	AH97-00943B	AH64-11306Z	AH64-01636B	AH64-00933G	AH92-01436D	AK92-00027A	AH92-01393A	AH59-00092M
	DVD-S324B	AH97-00941E	AH97-00943F	AH64-11306Q	AH64-01636D	AH64-00933A	AH92-01436D	AK92-00027A	AH92-01393A	AH59-00092P
	DVD-S324W	AH97-00941W	AH97-00943J	AH64-01320F	AH64-01636E	AH64-00933P	AH92-01436D	AK92-00027A	AH92-01393A	AH59-00092M
	DVD-S325	AH97-00942B	AH97-00947A	AH64-11306Z	AH64-01636B	AH64-00933G	AH92-01436D	AK92-00027A	AH92-01393C	AH59-00092M
	DVD-S325B	AH97-00942D	AH97-00947D	AH64-11306Q	AH64-01636D	AH64-00933A	AH92-01436D	AK92-00027A	AH92-01393C	AH59-00092P

4-2 Deck Assembly

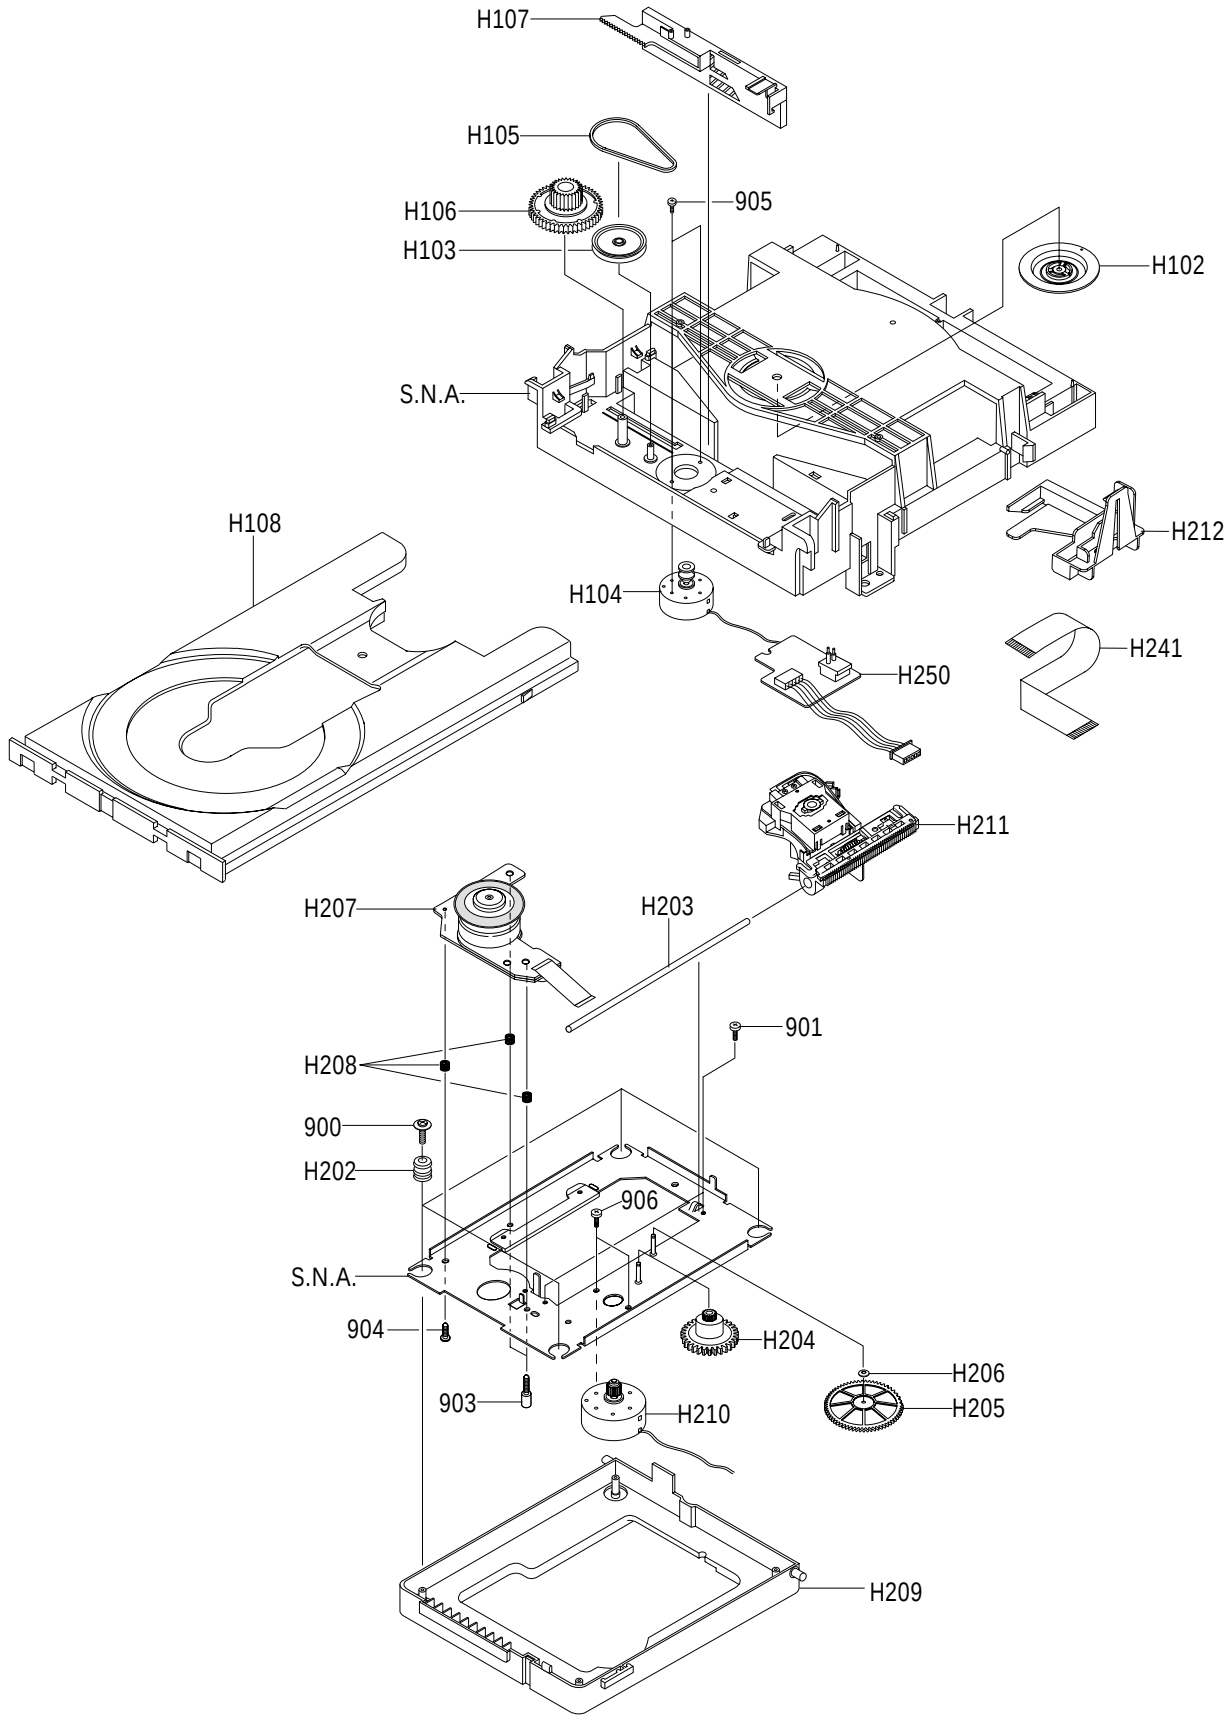

Loc. No	Parts No.	Description ; Specification	Remark
900	6003-001157	SCREW-TAPTITE;PWH,+,B,M2,L6,ZPC(YEL),SWR	
901	6001-001522	SCREW-MACHINE;FH,+,M2.6,L7,ZPC(YEL),SWRC	
903	6009-001245	SCREW-SPECIAL;SWRCH18A,NYLOCK,SOCKET,HEX	
904	6001-001466	SCREW-MACHINE;BH,+,M2,L6,ZPC(BLK),SWRCH1	
905	6001-001257	SCREW-MACHINE;PWH,+,M1.7,L3,ZPC(YEL),SWR	
906	AH60-00010A	SCREW-MACHINE-MOTOR;-,+,SWCH18AK,M1.7,L2	
H102	AH66-00111B	CLAMPER-ASSY;DP-5,POM+MAGNET,-,-,-,-,-,-	
H103	AH66-00123A	PULLEY-GEAR;DP-7,POM M90-44,-,-,-,-,-,-	
H104	AH31-00024A	MOTOR-LOAD ASSY;SM-2412L2,DP-7,-,-,-,-,-	
H105	6602-001076	BELT-RECTANGULAR;CR,T1.2,4.3%,1.2X25.1,B	
H106	AH66-00124A	GEAR-TRAY;DP-7,POM,M90-44,-,-,-,-,-,-	
H107	AH66-00125A	SLIDER-HOUSING;DP-7,POM,-,-,-,-,-	
H108	AH63-00217A	TRAY-DISC;-,ABS,-,-,-,-,BLK,DP-7	
H202	AH73-00023A	RUBBER-INSULATOR;BUTYL RUBBER,-,DP-3,	
H203	AH61-50327A	SHAFT-P/U;DP-3,SUS420J2,L84.7,OD3,-,-,-	
H204	AH66-00075A	GEAR-FEED A;-,POM M90-44,-,-,-,-,-,-,-	
H205	AH66-00170A	GEAR-FEED B;DP-7S,POM M90-44,0.5,14,-,-,	
H206	AC60-30306A	WASHER-SLIT;-,-,ID2.1,OD5.0,T0.5,-,POLYS	
H207	AH31-00032A	MOTOR-SPINDLE ASSY;RSM-2610F1,DP-7S,-,-,	
H208	AH61-00403A	SPRING ETC-SPINDLE;DP-5,SWPB,PI4.9,-,-,-	
H209	AH61-00513A	CHASSIS-SUB;DP-7,ABS(SR-0320),-,-,-,-,-,	
H210	AH31-00016A	MOTOR-FEED ASSY;-,DP-5,-,-	
H211	AH97-00961A	ASSY-PICK UP;-,SOH-DS2,SEM,W/T	COMMON
	AH97-00900A	ASSY-PICK UP;-,SOH-DS2,ASS'Y-PICK-UP	CIS ONLY
H212	AH61-00891A	HOLDER-FFC;DP-7S,PP,1,-,-,NTR,-	
H241	3809-001303	CABLE-FLAT;30V,80C,230MM,24P,1MM,UL2896	
H250	AH92-00900A	ASSY-HOUSING PCB;DVD-M101,MILLENO DECK(B	

MEMO